

Airdopes 201



Description


- ▶ The pristine the journey of your life is here to begin, as you ride through the highest waves of Nirvana on your boAt Airdopes 201. Just connect to the magic with Bluetooth V5.0 connectivity that runs for up to 3 hours of charge at a time.
- ▶ The immersive audio is built to help you experience the unreal, as you get to witness the sound. The lightweight design is made to make you look set to take on a hurricane with its minimalistic design. Keep the earbuds in the 470mAh charging case as you carry your style along with your music that allows for a total of almost 12 hours of play-time.
- ▶ The minimalistic earbud design with earhooks also multi-function button that readies you up to head into the eye of the storm. Activate voice assist with just a touch and play the game your way with the boAt Airdopes 201, its' effin dope!

Overview


- ▶ **Immersive Sound:** Access pure audio Nirvana with audio drivers made to help you slip into the sound as you steer this boAt to the shores of Nirvana, just plug in and begin your journey
- ▶ **Wireless Bluetooth Experience V5.0** - Tap into the wireless front with optimum Bluetooth that allows for high ranges of movement as you groove to the effing dope beat, get into the zone
- ▶ **Up to 3 Hours of Audio Bliss** - Tune in and let the beat run until the job is done, it's not only about fun. Sometimes you need to lock in and get serious with no distractions, take it the next
- ▶ **470mAh Charging/Carry Case** - The premium charging case allows for easy maneuverability as you ride the highest waves of nirvana on your boAt with a total 9 hours of play-time
- ▶ **Integrated Controls with Voice Assist** - Utilize absolute close control that allows you to witness the sound and experience the unreal with the integrated controls of the Airdopes 201
- ▶ **Sleek & Portable Lightweight Design** - Makes you preened and prepared for any scene as you become the trendsetter to be, impressions can last a lifetime, make a good one with the Airdopes 201
- ▶ **Supports Mono & Stereo Calling** - Take a trip to the land of comfort, with mono and stereo hands-free communication for an ergonomic secure fit experience while on the go, get moving
- ▶ **IPX 4 Sweat and Water Resistant** - Hit up any location you want with the security of IPX 4 sweat and water resistance made to help you power through the storms, it's time to energize your senses

Buttons and Indicators


- 1 MFB (multifunction button)
- 2 Indicator light

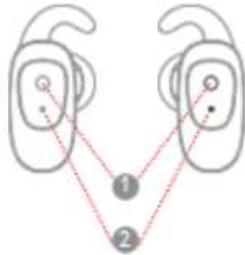

- 4 Charging Case Indicator

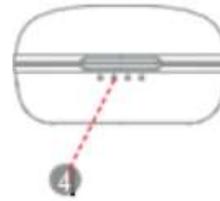

- 3 Charging contact point

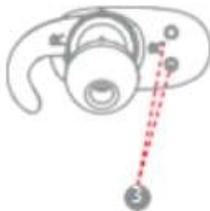

- 5 Micro USB charging port



Basic walkthrough

▶ Power On

- ▶ There are two ways to switch the ear buds on:
 - ▶ If the earbuds are taken out of the charging case and the charging case has battery, then the earbud's will automatically switch on.
 - ▶ To switch the earbud's on manually, press and hold the multifunction button for 3 seconds until the LED light begins to flash Orange. (LED light will flash Orange for 2 seconds)

▶ Power Off

- ▶ There are two ways to switch the earbud's off:
 - ▶ You can simply place them earbud's back into the charging case
 - ▶ Or you can press and hold the multifunction button for 5 seconds until Orange and White Led light flashes before the earbud's switch off. (LED light will flash red for 4 seconds)

Pairing

▶ Mono Earbud Use

- ▶ Please note that only the left earbud works in mono use. Take the left earbud out of the charging case; use either of the two options (mentioned above) to switch it on.
- ▶ The left earbud will automatically enter pairing mode (Orange and White LED light flash alternatively)
- ▶ Turn on Bluetooth on your phone/media device and search for “boAt Airdopes 201” from the list of available options
- ▶ Enter the password “0000” if asked for, and connect the earbud’s to your device. You can charge the right earbud while using th left in mono mode.
- ▶ Note: The earbud will remember this device and the next time when connecting it, remove the Right earbud as well to enter stereo mode.

▶ Stereo Earbud Use

- ▶ Switch the earbuds on; a blue light will flash to confirm that they have been switched on. Both earbud’s will pair with one another automatically.
- ▶ The earbuds will automatically enter pairing mode when switched on (Orange and White LED light flash alternatively)
- ▶ After the pairing is successful, the left earbud will automatically enter pairing mode
- ▶ Turn on Bluetooth on your phone/media device and search for “boAt Airdopes 201” from the list of available options.
- ▶ Enter the password “0000” if asked for, and connect the earbuds to your device. The earbuds will remember the device if it was the last one it was connected too before being switched off.

Charging

▶ Charge the Earbuds

- ▶ Put the earbuds into the charging case in their correct orientation.
- ▶ A red light on the earbuds will indicate they are still being charged.
- ▶ The light on the earbuds will go off once the Airdopes 201 are fully charged.
- ▶ When both two earbuds are fully charged, the carrying case will switch off to save power.

▶ Charge the Case

- ▶ **Warning : please do not charge the carrying case with “9V” or “12V” output. Otherwise, it may cause damage to the case.**
- ▶ To charge the case, plug in the USB cable and connect it to any USB port.
- ▶ The 4 lights aligned vertically in the center of the charging case indicate the charge/battery status.
- ▶ 4 lights are illuminated for 60 seconds once the case has been completely charged
- ▶ The earbuds can be charged a total of 4 times if the case is at full battery



Basic Functions

- ▶ Voice Assistant- Press the multifunction button for 2 seconds to activate voice assist.
- ▶ Answer/Hang up phone call- Tap the multifunction button once to answer any incoming call and once again to hang up once done talking.
- ▶ Rejecting phone calls - Press and hold the Multifunction button for a second to reject an incoming call.
- ▶ Play/Pause - Tap the multifunction button to play/pause music at your convenience.
- ▶ Next Track - When playing music, double click the right earbuds multifunction button to play the next track
- ▶ Previous Track - When playing music, triple click the right earbuds multifunction button to play the previous track
- ▶ **Volume up / Volume down** - The volume cannot be changed from the earbud's, the volume will have to be adjusted via the connected device.

Specifications

Bluetooth version	V5.0
Music play time	3 hours
Talk time	3 hours
Standby time	40 hours
Effective distance	Up to 3.6ft./12m
Bluetooth profiles	HFP1.7/A2DP1.3/ AVRCP1.5
Driver	10mm
Sound pressure level	98±3dB
Frequency response	20Hz---20 KHz
Battery of headset	50mAH Li-polymer Battery 5V
Charging voltage of headset	1.5hours
Charging time of headset	470 mAh Li-polymer Battery 5V
Battery of box	1.5hours
Charging voltage of box	7g x 2pcs
Charging time of box	50g
Earphone weight	
Charging box weight	
Sweat and Water Resistance	IPx4

FAQ

▶ Q. Device not connecting via Bluetooth

- Check to see if the device is in pairing mode, after powering it on, only the left earbud will flash red and blue for mono mode, if connecting in stereo mode then the right earbud will also flash orange for every 2 seconds.
- Check if the device is in the range of Bluetooth (usually 10m) and if there are any obstructions in between.
- Check to see if the device being connected to supports Bluetooth connections
- Check if it is a passcode issue and if so enter 0000
- Check to see if the device being connected to does not have any software issues - Check to forget the device on Bluetooth, update the mobile software

▶ Q. Charging case is not charging

- Check to see if the wire connected to the case is not broken, use other wires and also ensure that the charger being used is not of 9v or 12v as that will damage the case, the 4 lights at the bottom of the case indicate the charge status and when they are all illuminated, that means the case is fully charged.

▶ Q. Earbuds are not charging

- Check to see if the earpods have been put inside the case in the right orientation, A red light on the earbud's will indicate they are still being charged. This light will go off once the earbud's have been completely charged.

► Q. Device not entering stereo mode/ stuck in mono

- Check when both the earbuds are taken out of the charging case, a blue led will flash then they will pair to each other automatically with the left earbud flashing red and blue and the right one flashing blue every two seconds indicating that they are in stereo mode, Once L and R connect, only the L earbud's LED light will flash orange once every 5 seconds.
- Check whether you have peeled off the plastic film. If not, the Earbuds will not touch with the charging case charging point to activate the True Wireless Earbuds.
- Place the earbuds in the charging case and then try using them again. Check if it connects automatically.
- Check and see if hard resetting the device works as follows
 - Firstly, Make sure that the earphones are charging in the case Take the earbuds out of the case and then power them off. Press and hold the multifunction button for 5 seconds to clear phone/media device record. Both L and R's LED light will flash white and orange. Then place the earbuds back into the case Remove the earbuds once again and power on. The earbuds will go into pairing mode. Once both earbuds have been paired successfully the R side will flash white & orange and the L piece will flash white once every 6 seconds.

► Q. The sound is distorted/low volume/low bass/low quality

- Check if connected device does not have any equalizer settings applied.
- Check if the problem still occurs if the device is moved closer and all obstacles in the middle are removed.
- Check if the distortion or quality lowers at all volumes or only at high volumes.
- Check to Check different media players and different devices and if the distortion happens on all devices or only on specific ones.
- Check if the problem occurs at all levels of charging or only at low charging levels.

► Q. The device does not turn on

- Check to see if the device has been properly charged first, A red light on the earbud's will indicate they are still being charged. This light will go off once the earbud's have been completely charged.
- Check if the voltage of the charger is correct for the charging case and if the lights on the bottom are glowing to indicate the charge level.
- Check by switching on the earbud' on manually, press and hold the capacitive touch control for 5 seconds, the LED light will flash blue for 2 seconds.
- Check if the device was not subject to any mishandling, broken wires or exposed to direct sunlight or hazards like fire

▶ Q. The in-built controls of the device are not working

- Check if the controls do not work while connected to another device
- Check if the media player being used supports such controls and if they controls do not function on call or other media players
- Check if the controls have been physically damaged or exposed to any hazards

▶ Q. Occasional disconnects/ The right earpod keeps disconnecting

- Check if restarting the device resolves the issue.
- Check if the same problem happens for different devices and media players.
- Check if there are any obstructions between the earpods and the device and clear them, move the device at a closer range to the earpod and see if it still affects it.

▶ Q. If there are other exceptions in use

- Check if restarting the device resolves the issue.
- Place the earbud's in the charging case and then try using them again.
- Try factory-resetting the device.

► Q. The sound output is muffled

- Check if dust has accumulated inside the earbuds or if there is any obstruction.
- Check if ear wax has accumulated inside the earbuds.
- Check if there is no damage to the tips of the earbuds and see if changing them helps.
- Check if sweat or water has gone inside the earbuds.

► Q. Voice is muffled during calls/ Microphone has muffled input

- Check if restarting the device resolves the issue.
- Check if dust or ear wax has accumulated near or inside the microphone port, there is no blockage on the microphone.
- Check if sweat or water has gone inside the microphone.
- Check if there are any obstructions between the earpods and the device and clear them, move the device at a closer range to the earpod and see if it still affects it.

► Q. Earbud not charging while inside the case even when the case is charged.

- Check if the charging pins of the case are clear and there is no obstruction.
- Check if the charging pin of the earbuds are clear and there is no obstruction.
- Check if the orientation of the earbuds inside the case is correct and they have been properly inserted inside the case.

▶ Q. Can I lower the volume of the voice prompts/turn them off?

- No, the voice prompts are integrated inside the earbuds and as of now there is no feature to turn them off or lower their volume.

▶ Q. Can I control the volume of the earbuds through integrated controls?

- No, the earbuds do not have any integrated volume control on them, the volume has to be controlled using your connected Bluetooth device.
- Ensure that in the Bluetooth settings of your media device, you have enabled syncing of Bluetooth and phone volume levels otherwise you may not be able to fully control the volume of the earbuds as intended.

▶ Q. Can I submerge my earbuds in the water/swim with it?

- While your earbuds do have a certain amount of water and sweat resistance (reply based on the IP level of the earbud) it is recommended that they are not submerged inside water directly or used for prolonged periods inside water like for swimming/showers as it may lead to damage.